


INCEPT R38J RACER 22-May-2010

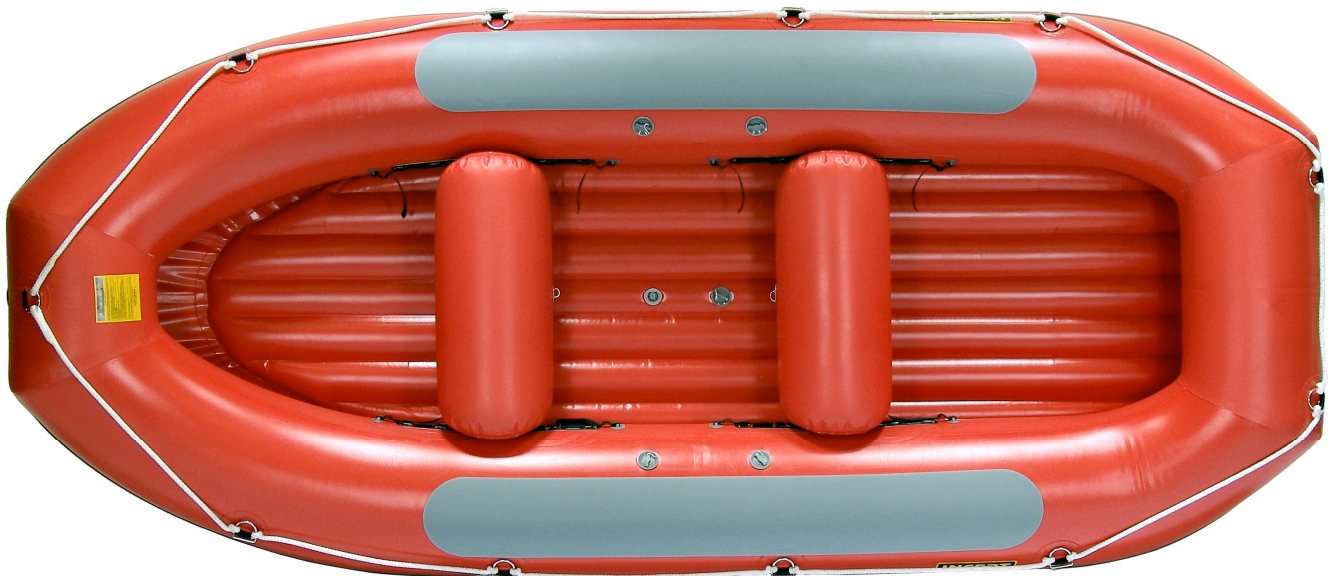

See bailing opening at stern →



Thwart position needs to be set towards → stern for highest speed



← Floor bails through stern. Floor longer at stern for more speed.



Floor at bow is Vee for best control



Floor at stern is adjustable for highest speed